

[01-10-0007] ELU - Earth Leakage Unit 12VDC



Earth Leakage Unit (ELU) Testing

With the unit powered with the correct voltage, using a 450-500 Ohm $\frac{1}{4}$ W resistor temporarily bridge it between the frame terminal and positive terminal of the ELU. The relay **SHOULD** switch while resistor is connected and switch back again when the resistor is removed. Repeat the process in between the frame terminal and negative terminal of the ELU. The relay **SHOULD** again switch while resistor is connected and switch back again when the resistor is removed.